



## **Viewing Dash Displayed Fault Codes**

## CONTENTS

**Viewing Active Fault Codes Actia Dash Cluster** **Page 3**

**Blue Bird Products Affected:**

D3FE, D3RE, T3FE, T3RE All Year Models  
BBCV, 2011 Year Model To Current

**Viewing Active Fault Codes Actia Dash Discrete Gauges** **Page 4**

**Blue Bird Products Affected:**

A3FE, A3RE, All Year Models  
BBCV, 2003 - 2006 Year Models

**Viewing Active Fault Codes Stoneridge Dash Cluster** **Page 5 - 6**

**Blue Bird Products Affected:**

BBCV, 2007 - 2010 Year Models

**NOTE: General fault code descriptions can be viewed on the Blue Bird Dealer Field Service website below. Enter the dash displayed fault code identifier and failure mode number(s).**

<http://gateway.blue-bird.com:31030/distinfo/customerservice/techpub/fieldService.htm>

**NOTE: On the Ford engine, transmission and Roush CleanTech fuel system, a standard OBD II scanner or Ford software (IDS) is required to view fault codes.**

**NOTE: On the GM engine, and CleanFuelUSA fuel system, a GM TECH II or equivalent is required to view fault codes.**

**NOTE: Additional fault code troubleshooting information is available on the engine, transmission, and ABS manufacturer websites.**

<https://qsol2.cummins.com/info/index.html>

<http://www.roushcleantech.com/service>

<http://www.allisontransmissionpublications.com/>

<http://www.bendix.com/en/>

<http://www.meritorwabco.com/>

# Viewing Fault Codes Actia Dash Cluster





Lower Button

Upper Button



## SETTINGS AND DIAGNOSTIC MENU

Access this menu by setting the park brake and then from the Drive Mode Screen press the lower button for >5 seconds. Use the upper and lower button to scroll the menu. Highlighted items can be selected by pressing both of the buttons together.

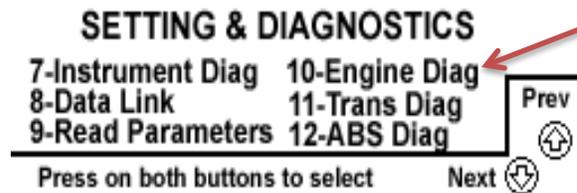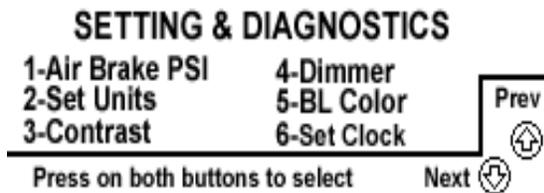


When selected the screen displays the active fault code(s).

Example:

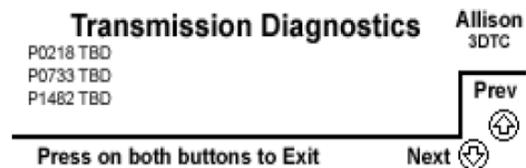
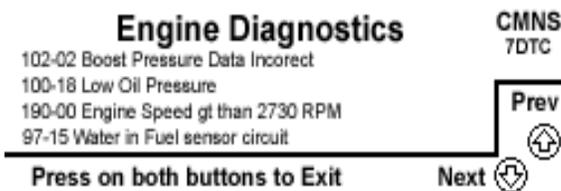


# Viewing Fault Codes Actia Dash Speedometer

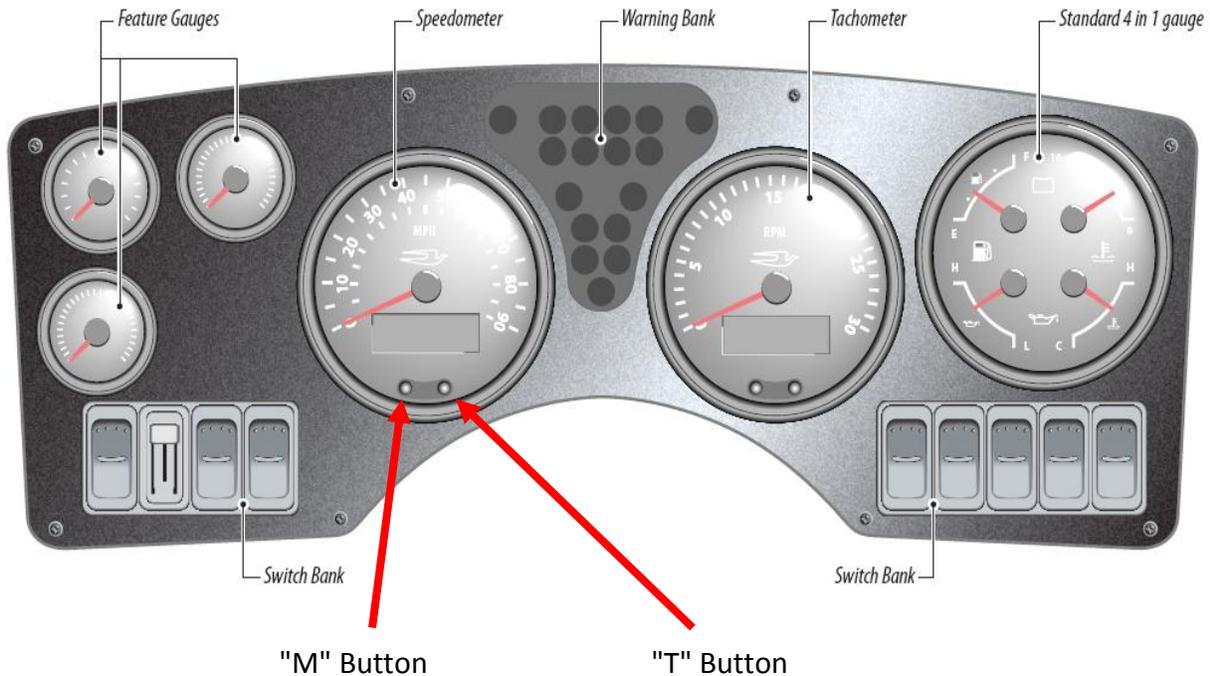

## SETTINGS AND DIAGNOSTIC MENU

Access this menu by setting the park brake and then from the Drive Mode Screen press the "M" button for >5 seconds. Use the "M" and "T" button to scroll the menu. Highlighted items can be selected by pressing both of the buttons together.

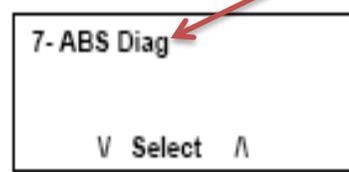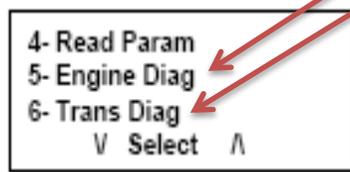

When selected the screen displays the active fault code(s). Example:



# Viewing Fault Codes Stoneridge Dash Cluster



## DIAGNOSTIC MENU

Menu navigation and option selection is done by pressing the Esc, Select, Up and Down buttons located in the stalk switch control lever. See Figures below



Stalk switch control lever

- Esc (escape) is used to return to the pervious menu and cancel a setting operation
- < Select is used to activate the highlighted option in the menu. Also it is used as the "enter" key.
- Up arrow moves the cursor up, also increments a numeric value during setting operations.
- Down arrow moves the cursor down, also decrements a numeric value during setting operations.

When selected the screen displays the active fault code(s).

Display Settings  
Diagnostics  
Password

Non-Driving Mode

7658.8 MI

### Display Settings

- Language
  - English
  - Francais
  - Español
- Units
  - Distance
    - Km
    - Miles
  - Fuel consumption
    - Km/L
    - L /100km
    - MPG (IMP gallons)
    - MPG (US gallons)
- Time/Date
  - Clock Format
  - Date Format
- Display Light
  - Contrast
  - Backlight
  - Night mode
- Change Password

### Diagnostics

- Fault Diagnostics
  - Engine ECU ←
  - Gearbox ECU ←
  - Brake ECU ←
- Cluster Self test
  - Telltails test
  - Gauge test
  - Display test
  - Speaker test
- Part Number
- A/D Input Diag
  - Digital
  - Analog
- Configuration

### Password